

## Face Mask Instructions:



Outer Fabric: 10" x 8" (100% cotton or tightly woven cotton blend)

Inner Fabric: 8" x 8" (100% cotton or tightly woven cotton blend)

Fusible Interfacing: 6 ¾" x 7 ½" Pellon SF101 Shape Flex woven fusible interfacing

(Pellon is 20" wide – 2 pieces will be 6 ¾" the last will be 6 ½")

Elastic: 6" length (2 pieces) 1/8" flat elastic (or ½" cut in half lengthwise)

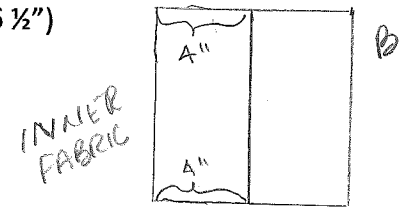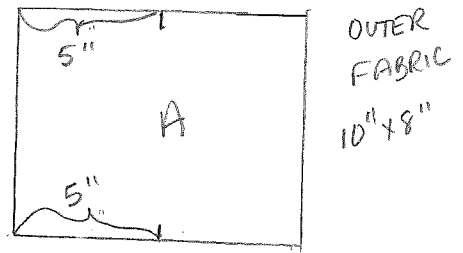

- Fuse interfacing to **WRONG** side of inner fabric.
- Mark center of 10" sides of outer fabric (top and bottom) see diagram A - mark on right side
- Mark center of top and bottom of inner fabric – see diagram B *after interfacing is fused - mark on wrong side*
- With **RIGHT** sides together center inner fabric on outer fabric, stitch both long edges using ¼" seams.
- Turn right side out, press seams at top and bottom.
- Topstitch 1/8" from edges.
- Mark pleats (on short sides/inner fabric) measuring from top edge at following intervals: 1 ½", 2 ½", 3", 4", 4 ½" & 5 ½". *mark in pencil or washable fabric marker from side to side*
- Press folds at the 1 ½", 3" & 4 ½" marks.
- Place 1 ½" fold at 2 ½" mark and pin, place 3" fold at 4" mark and pin, place 4 ½" mark at 5 ½" mark and pin.
- Press folds in place.
- Stitch pleats 1/8" from outside edge
- Fold side edge in to meet inner fabric edge and press.
- Fold again to cover raw edges.
- Place elastic in top corner under fold, stitch in place very close to edge.
- Continue topstitching fold in place close to inner edge placing other end of elastic under fold at bottom corner.
- Repeat on other side.